



- F : Fusibile - Fuse
- ON/OFF : Interruttore - main switch
- COM : Commutatore - selector switch
- T : Presa Termostato - thermostat socket
- SIC : Termostato di sicurezza - safety thermostat
- LIMIT : Termostato limit - limit thermostat
- FAN : Termostato fan - fan thermostat
- B : Bruciatore - burner
- M : Motore - motor
- R : Relè anomalie ventil. - relay fan fault
- K : Teleruttore (start ventil.) - remote control switch (fan start)
- P : Protezione motore - motor protector

Rev.No	Date	Description	Drawer
01	20/01/2014	Aggiornato schema	B.Fulcheri
00	06/06/2013	First issue	B.Fulcheri

Linear dimension range	up to 6	over 6 up to 30	over 30 up to 120	over 120 up to 400	over 400 up to 1000	over 1000 up to 2000	over 2000 up to 4000
tolerance limits	±0.3	±0.5	±0.8	±1.2	±2	±3	±4

Description Schema elettrico per HER 400-750 Wiring diagram for HER 400-750		Drawing No SCH097	
Material -		Designer A.Barla	File name SCH09701
		Drawer B.Fulcheri	Purchased part No -
		Latest revision approved by A.Barla	Manufactured part No -
		Date 06/06/2013	
 MUNTERS ITALY S.p.A. - Mondovì <small>This drawing is exclusive property of MUNTERS ITALY S.p.A.. Any vision, reproduction or release without written authorization by MUNTERS ITALY S.p.A. is ABSOLUTELY FORBIDDEN</small>		Thickness -mm Weight -g	DIMENSIONS WITHOUT TOLERANCE LIMITS: ROUGH PRECISION LEVEL UNI EN 22768-1/2
		Drawing scale -	Piper size A4