
LF/LFd

Assembly manual

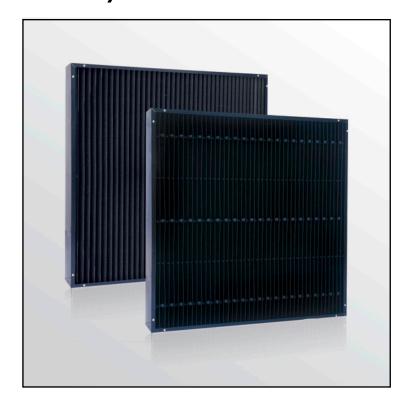

Spare part list + Assembling guideline

LF/LFd Light filter



LF/LFd Assembly manual

Original instructions

This document is destined for the user of the apparatus: it may not be reproduced in whole or in part, committed to computer memory as a file or delivered to third parties without the prior authorisation of the assembler of the system.

Munters Italy S.p.A. reserves the right to effect modifications to the apparatus in accordance with technical and legal developments.

Index

chap	ter	page
1.	SPARE PART LIST	4
	LF exploded view	4
	Spare parts	5
	LFd exploded view	7
	Spare parts	8
	LFd - MWI exploded view	10
	Spare parts	11
2.	ASSEMBLING TOOLS	13
3.	ASSEMBLING GUIDELINES	14
	Frame assembling	14
	LFd waves assembling	1.5
	LF waves assembling	16
	Frame completion	17



WARNING

All the components and spare parts MUST be storaged in dry and clean environment.

Please note that when the light filter is mounted in his working position the waves have to be positioned vertically.

- Max environment temperature during operation and/or stockage shall not exceed 50 °C.
- Protect filter from direct sunrays when not in operation.
- Do not stock in sealed packages under direct sunrays.
- Verify that adequate ventilation is provided.

Spare part list

LF

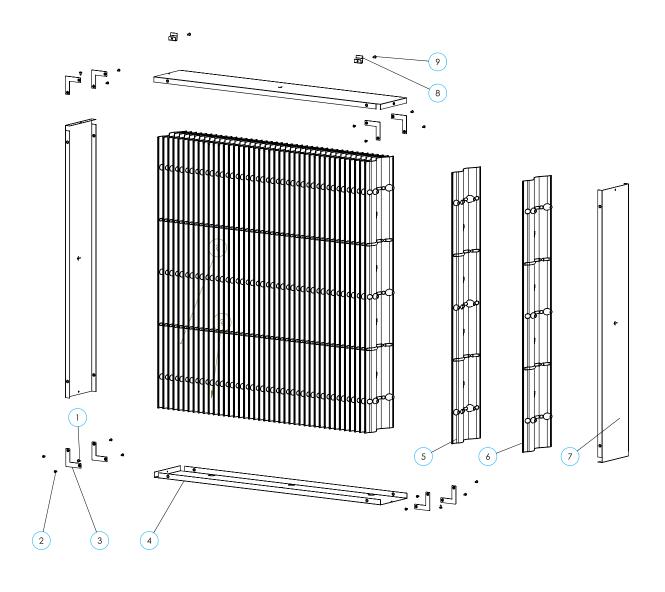


fig. 1

Ref. 8 to fix on top panel EM/ED24HE or distance kit for EC/ED36HE/ED30HE.

Spare parts

Ref.	Picture	Description	Q.ty
1		SELF TAPPING SCREW (ROUND HEAD) 6.3X13	8
2		SELF TAPPING SCREW (FLAT HEAD) 6.3X16	16
3		EMBOSSED ANGLE BRACKET	8
4		BOTTOM PANEL	1
5		PLASTIC WAVE CIRCLE	TAB.1
6		PLASTIC WAVE TRIANGLE	TAB.1
7		TOP/SIDE PANEL	3
8		HOOK FOR FILTER	2

Chapter 1 | Spare part list

9		SELF TAPPING SCREW (ROUND HEAD) 6.3X19	2
---	--	--	---

Package content

MODEL	LF50	LF36	LF30	LF24
PLASTIC WAVE CIRCLE	23	18	16	12
PLASTIC WAVE TRIANGLE	22	18	15	12

LFD

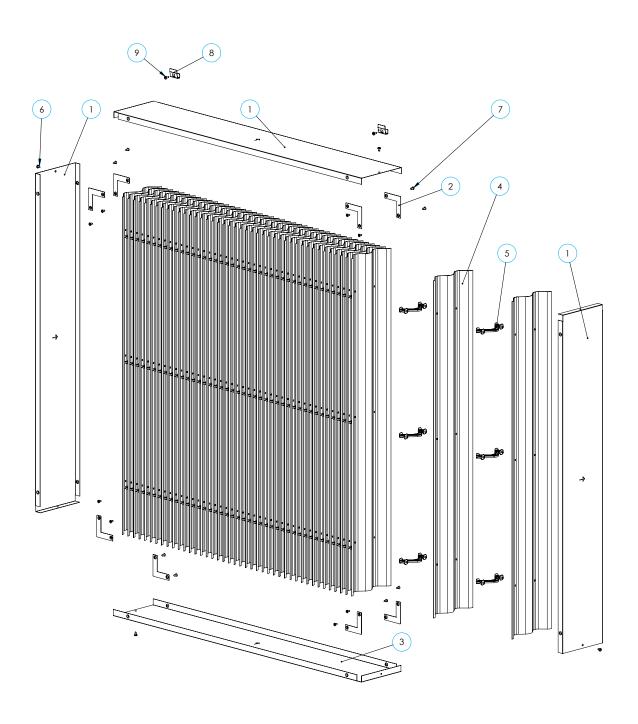


fig.2

Ref. 5 central spacers for 52/50/36 only.

Ref. 8 to fix on top panel EM/ED24HE or distance kit for EC/ED36HE/ED30HE.

Spare parts

Ref.	Picture	Description	Q.ty
1		TOP/SIDE PANEL	3
2		EMBOSSED ANGLE BRACKET	8
3		BOTTOM PANEL WITH HOLES	1
4		PLASTIC WAVE	
5	i di	SPACER	
6	(Table)	SELF TAPPING SCREW (ROUND HEAD) 6.3X13	8
7		SELF TAPPING SCREW (FLAT HEAD) 6.3X16	16
8		HOOK	2

Chapter 1 | Spare part list

9		SELF TAPPING SCREW (ROUND HEAD) 6.3X19	2
---	--	--	---

Package content

MODEL	LFD52	LFD50	LFD36	LFD30	LFD24
WAVE	44	42	34	29	23
SPACER	129	125	100	57	45

LFD - MWI

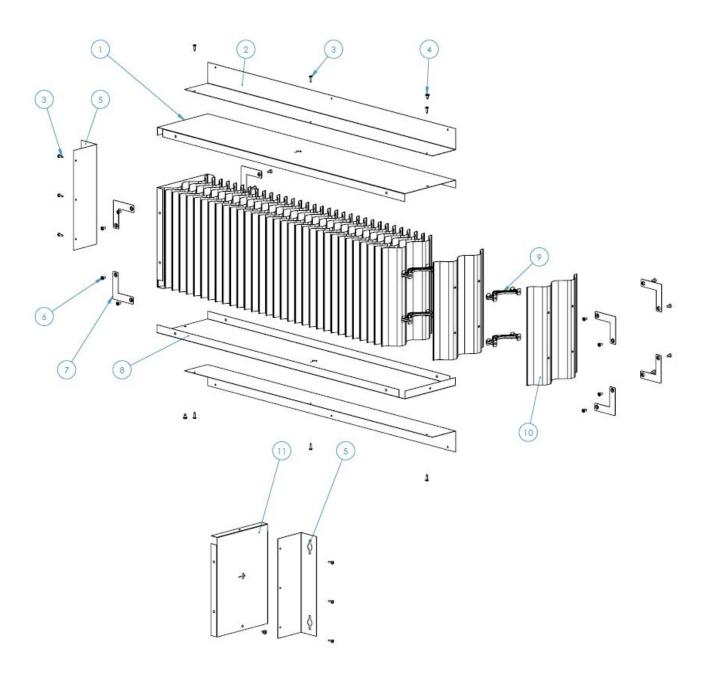


fig.3

Spare parts

Ref.	Picture	Description	Q.ty
1		TOP PANEL	1
2		ANGLE BRACKET TOP/BOTTOM	2
3	(SELF TAPPING SCREW 4.2X19	12
4	Time 1	SELF TAPPING SCREW (ROUND HEAD) 6.3X13	8
5		ANGLE BRACKET SIDE	2
6		SELF TAPPING SCREW (FLAT HEAD) 6.3X16	16
7		EMBOSSED ANGLE BRACKET	8
8		BOTTOM PANEL WITH HOLES	1

9	i di	SPACER	66
10		PLASTIC WAVE	34
11	• •	SIDE PANEL	2

Assembling tools

2.

Ref.	Picture	Description	Q.ty
1		PNEUMATIC SCREWDRIVER	1
2		PHILLIPS SCREW HEAD ADAPTOR	1

© Munters AB, 2019

13

FRAME ASSEMBLING



Verify the the bolts and screws package, which includes:

- 8 angle brackets
- 20 self tapping screws
- 2 hooks









Assemble bottom panel (the one with holes) together with the side panel by means of qty. 1 self tapping screw (round head - 6.3x13), qty. 2 angle brackets and qty. 8 self tapping screws (flat head - 6.3x16).

Assemble the top panel - same shape as side panels together with the free side of the lateral panel by means of qty. 2 self tapping screws (round head - 6.3×13), qty. 2 angle brackets and qty. 8 self tapping screws (flat head - 6.3×16). It is recommended using a pneumatic screwdriver applying a torque of 16 Nm.

© Munters AB, 2019



Place the 3 panels set on the floor. The side panel should adhere to the floor.

LFD WAVES ASSEMBLING



Start to mount the plastic waves: first the wave then the spacers.



Fix other spacers on top of the wave.



Insert another wave and follow the procedure in order to complete the filter.



End the assembly with the last wave.

LF WAVES ASSEMBLING



Divide the 'triangle' waves from the 'circle' ones.



Start with a 'circle' wave.



Proceed with a 'triangle' wave.




Continue to alternate 'triangle' and 'circle' waves to complete the light filter.

FRAME COMPLETION







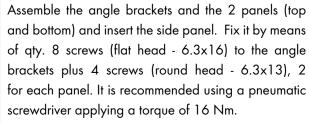







Remove the protection mesh from the back side of the fan and place the hooks on the fan by means of qty. 2 self tapping screws (round head - 6.3x19).



Turn the filter 90° to gain the operating position, with the waves upright.





Hook the filter to the fan.



Please note that on some specific fans it may be requested an additional Spacer Kit.

For further information, please contact the Customer Service.



www.munters.com

Australia Phone +61 2 8843 1594, agh.info@munters.com.au, Brazil Phone +55 41 3317 5050, contato@munters.com, Canada Phone +1 517 676 7070, aghort.info@munters.com, China Phone +86 10 8048 3493, marketing@munters.cn, Denmark Phone +45 98 623 311, aghort@munters.dk, Germany Phone +49 (0) 25 58 - 93 92-0, India Phone +91 20 6681 8900, info@munters.in, Indonesia Phone +66 2 642 2670, info@munters.co.th, Israel Phone +972 3 920 6200, info@munters.co.il, Italy Phone +39 0183 5211, info@munters.it, Japan Phone +81 3 5970 0021, mkk@munters.jp, Korea Phone +82 2 7618 701, munters@munters.co.kr, Mexico Phone +52 818 2625 400, dhinfo@munters.com, Singapore Phone +65 7 446 828, info@munters.com.sg, South Africa and Sub-Sahara Countries Phone +27 11 997 2000, info@munters.co.za, Spain Phone +39 0183 5211, info@munters.it, Sweden Phone +46 8 6266 300, info@munters.se, Thailand Phone +66 2 6422 670, info@munters.co.th, Turkey Phone +90 262 7513 750, info@muntersform.com, USA Phone +1 517 676 7070, aghort.info@munters.com, Export & Other countries Phone +39 0183 5211, info@munters.it